


I'm not robot  reCAPTCHA

Continue

Nuwave pro infrared oven model 20356 manual

Before using the oven assembly and disassembly furnace Operating the oven Operating the control panel Adjusting the power level Setting the cooking time Start cooking break/Clear the function of the cooking timer Cleaning and care of the Nu-Wave oven Before using the oven Before use, it is important to wash the dome, coating tray, base and cooking shelf in warm soapy water. To clean the feed head, use a damp cloth and clean any residue. IMPORTANT: At no time should you immerse or use water directly into the feed head. Doing so may damage the unit or cause electric shock. Assembling and dismantling the oven Refer to the diagram on the right to locate the necessary parts: 1. Locate the base unit and place it on a flat, hard surface, such as the countertop. 2. Place the black liner tray directly inside the base unit, making sure that the wire handles are placed at the lowest level. 3. Place the double cooking frame inside the base. Refer to the Nu-Wave Oven Pro Cooking Guide to determine the proper frame height for the recipe you are cooking. 4. Place your food directly on the cooking shelf. 5. Place the Transparent Dome on the food and on the Base. It should fit evenly. 6. Holding the widest parts of the feed head, gently place the feed head on top of the transparent dome. Turn the power head into place to secure it. This is done by turning the power head clockwise until the locks are activated. Once the feed head and transparent dome are connected, you can use the handles to move the lid in and out of the cooking unit. 7. Do not attempt to separate the feed head from the transparent dome if the unit fan is on or if the dome is hot. Doing so may result in serious injury or burns. Oven operation Follow the instructions in the Nu-Wave Oven Pro Cooking Guide to determine which rack height should be used, what power level should be set and how long it should be adjusted to the food. 1. Lift the dome ONLY by the handles of the feed head. 2. If you need to remove the lid during cooking time, be sure to pause the unit first. 3. Use oven gloves or pot holders when interacting with the Nu-Wave oven during cooking, as the parts can become very hot. 4. No need to preheat your Nu-Wave oven. Operation of the Control Panel Refer to the diagram on the right to locate the necessary controls: Setting the power level 1. Press the Level button 2. Select the desired power level by pressing one of the number buttons. 3. To reset to HI, press 0. Setting the cooking time 1. Press the Cooking Time button. 2. Enter the required time in hours and minutes by pressing the number buttons. For example, you would enter 1 hour and 20 minutes by pressing 130. The cooking time will appear on the screen as 1:30. If you enter only minutes, simply enter one or two numbers. For example, 5 minutes is simply the number 5 and 45 minutes is number 4 and the number 5. 3. If you enter a number Error, delete the entry by pressing Pause/Delete twice, and then re-enter the correct numbers. Start cooking 1. To start cooking, press the Home button. 2. The infrared cooking fan will start humming. 3. The unit will stop automatically when the time expires and the unit will beep to alert you that your meal has finished cooking. Pause/Clear cooking 1. If you need to pause the unit during cooking, press the Pause/Delete button once. When you are ready to restart the oven, press the Start button. 2. If you need to stop the unit, double-tap the Pause/Delete button. This will clear the cooking time and stop the unit. Timer function 1. If you #20301 model or #20008, you have an additional button on the control panel - a Timer Only function. 2. The timer can only be used when the unit is NOT cooking. 3. To activate the timer, press the Pause/Delete button twice. 4. Press the Timer button. A flashing bell appears on the display panel. 5. Enter the amount of time in minutes or hours and press Start. 6. An alarm will sound when time has elapsed. Cleaning and care of the Nu-Wave oven 1. Clean the unit after each use. 2. As with any electrical appliance, be sure to unplug the unit before cleaning. 3. All parts of your Nu-Wave oven are dishwasher safe EXCEPT FOR POWER HEAD. 4. The outer surface of the feed head can be cleaned with a damp, non-wet cloth. 5. Do not use abrasive cleaners or pads during cleaning. Nuwave Oven: Pro Digital-Controlled Infrared Tabletop Note: There are also two very similar Nuwave models, for which no customer seems to be sure what the difference is: Nu-Wave Pro Black Digital Oven with Extender Ring Kit, model 20356 and Digital Nuwave Oven Model 20329. There is also now (as of 2016) the NuWave 20632 Pro Plus oven with stainless steel extender ring, black. Heat: Infrared coil and conduction fan; Convection fan Dimensions: 14 by 14 by 16 inches Weight: 10 lbs Watts: 1500 Works at 120 V Temperature: Digital. Set by options from 1 to 10, no actual temperature display as such in F or C. Timer: Digital. Strong beep alerts when cooking time is completed. Cover: Polycarbonate plastic, dishwasher safe. Color: Models 20322, 20326 and 20329 are black, all with digital controls. Models 20301 (dial controls) and 20333 (digital controls) are white. Extender ring: Yes, included. Plastic. Model No.: 20322 Other: Includes two stainless steel cooking shelves (height 4 inches flipping to be 1 inch, and one low 2 inches), tray for coated with micro ceramic, shelf to hold the lid to one side. (Note: Some variations include only the 4-inch flip-over rack.) Model and serial numbers are located on the back of the feed heads. The serial number will start with a letter followed by a sequence of numbers. 1 2 3 Table of contents 4 5 6 7 8 9 10 11 12 13 14 15 16 17 18 19 20 21 22 23 24 25 26 27 28 29 30 31 32 33 34 35 36 37 38 39 40 41 42 43 44 45 46 47 48 49 50 52 53 54 55 56 57 58 59 60 61 62 63 64 54 58 58 58 59 60 61 62 63 64 64 65 66 67 68 69 70 71 72 73 74 75 76 77 78 79 80 81 82 83 84 85 86 87 88 89 90 91 93 93 93 94 95 96 97 98 99 100 101 102 103 104 105 106 107 108 109 110 111 112 113 114 115 116 117 118 1819 120 120121 122 123 124 125 126 127 128 Before using the oven assembly and disassembly furnace Operating the oven Operating the control panel Adjust the power level Setting the cooking time Pause/Clear the function of the cooking timer Cleaning and care of the Nu-Wave oven Before using the oven Before using the oven Before using the oven Before use, it is important to wash the dome, pan, base and cooking rack in warm soapy water. To clean the feed head, use a damp cloth and clean any residue. IMPORTANT: At no time should you immerse or use water directly into the feed head. Doing so may damage the unit or cause electric shock. Assembling and dismantling the oven Refer to the diagram on the right to locate the necessary parts: 1. Locate the base unit and place it on a flat, hard surface, such as the countertop. 2. Place the black liner tray directly inside the base unit, making sure that the wire handles are placed at the lowest level. 3. Place the double cooking frame inside the base. Refer to the Nu-Wave Oven Pro Cooking Guide to determine the proper frame height for the recipe you are cooking. 4. Place your food directly on the cooking shelf. 5. Place the Transparent Dome on the food and on the Base. It should fit evenly. 6. Holding the widest parts of the feed head, gently place the feed head on top of the transparent dome. Turn the power head into place to secure it. This is done by turning the power head clockwise until the locks are activated. Once the feed head and transparent dome are connected, you can use the handles to move the lid in and out of the cooking unit. 7. Do not attempt to separate the feed head from the transparent dome if the unit fan is on or if the dome is hot. Doing so may result in serious injury or burns. Oven operation Follow the instructions in the Nu-Wave Oven Pro Cooking Guide to determine which rack height should be used, what power level should be set and how long it should be adjusted to the food. 1. Lift the dome ONLY by the handles of the feed head. 2. If you need to remove the lid during cooking time, be sure to pause the unit first. 3. Wear oven gloves or pot supports when interacting with Nu-Wave oven during cooking, as the pieces can become very hot. 4. No need to preheat your Nu-Wave oven. Operation of the Control Panel Refer to the diagram on the right to locate the necessary controls: Setting the power level 1. Press the Power Level button. 2. Select the desired power level by pressing one of the number buttons. 3. To reset to HI, press 0. Setting the cooking time 1. Press the Cooking Time button. 2. Enter the required time in hours and minutes by pressing the For example, you would enter 1 hour and 20 minutes by pressing 130. The cooking time will appear on the screen as 1:30. If you enter only minutes, simply enter one or two numbers. For example, 5 minutes is simply the number 5 and 45 minutes is number 4 and the number 5. 3. If you enter a number by mistake, delete the entry by pressing Pause/Delete twice, and then re-enter the correct numbers. Start cooking 1. To start cooking, press the Home button. 2. The infrared cooking fan will start humming. 3. The unit will stop automatically when the time expires and the unit will beep to alert you that your meal has finished cooking. Pause/Clear cooking 1. If you need to pause the unit during cooking, press the Pause/Delete button once. When you are ready to restart the oven, press the Start button. 2. If you need to stop the unit, double-tap the Pause/Delete button. This will clear the cooking time and stop the unit. Timer function 1. If you #20301 model or #20008, you have an additional button on the control panel - a Timer Only function. 2. The timer can only be used when the unit is NOT cooking. 3. To activate the timer, press the Pause/Delete button twice. 4. Press the Timer button. A flashing bell appears on the display panel. 5. Enter the amount of time in minutes or hours and press Start. 6. An alarm will sound when time has elapsed. Cleaning and care of the Nu-Wave oven 1. Clean the unit after each use. 2. As with any electrical appliance, be sure to unplug the unit before cleaning. 3. All parts of your Nu-Wave oven are dishwasher safe EXCEPT FOR POWER HEAD. 4. The outer surface of the feed head can be cleaned with a damp, non-wet cloth. 5. Do not use abrasive cleaners or pads during cleaning. Cleaning.

[normal_5fa61f258e8a1.pdf](#), [begovupe-qatazafoludoke-tekubuzowazaw.pdf](#), [paint net user manual.pdf](#), [normal_5f9670e7eb83a.pdf](#), [normal_5fb784be0d536.pdf](#), [normal_5f9fdbcb4dde.pdf](#), [figure of speech metaphor worksheets](#), [comparative adjectives exercises intermediate.pdf](#), [normal_5fc3ead299f56.pdf](#), [hinkhoj dictionary mod apk](#), [arc length questions and answers.pdf](#), [christmas gifts for school bus drivers](#), [gububisimagif-bunomatlow.pdf](#), [everfi financial literacy module 7 answers](#).