



I'm not robot



**Continue**

# Alpine iva-d300 installation manual

Dasas programmas Word funkcijas nevar pared't pakalpojum Google dokumenti un, ja veiksit izmaiias, tes tiks atmetasSkatt detaliz-ctu inform-ciju EN Mobile Multimedia Station IVA-D300 FR - OWNER's MANUAL Please read before using this equipment. Please read before using this device. MANUAL DE OPERACIONN Léalo antes de utilizar este equipo. IT ALPINE ELECTRONICS MARKETING, INC. ALPINE ELECTRONICS OF AUSTRALIA PTY. Ltd. ALPINE ELECTRONICS FRANCE S.A.R.L. 1-1-8 Nishi Gotanda, 6-8 Fiveways Boulevard Keysborough, (RCS PONTOISE B 338 101 280) Shinagawa-ku, Victoria 3173, Australia 98, Rue de la Belle Etoile, Z.I. Paris Nord II, Tokyo 141-0031, Japan Phone 03-9769-0000 B.P. 50016, 95945 Roissy Charles de Gaulle Phone 03-5496-8231 ALPINE ELECTRONICS GmbH Cedex, France ALPINE ELECTRONICS OF AMERICA, INC. Phone 01-48638989 SE Frankfurter Ring 117 19145 Gramercy Place, Torrance, 80807 Munchen, Germany ALPINE ITALIA S.p.A. California 90501, U.S.S. A. Phone 089-32 42 640 Viale C. Colombo 8, 20090 Trezzano Phone 1-800-ALPINE-1 (1-800-257-4631) ALPINE ELECTRONICS OF U.K. LTD. LTD. Sul Naviglio (MI), Italy ALPINE ELECTRONICS OF CANADA, INC. Phone 02-484781 Alpine House 7300 Warden Ave., Suite 203, Markham, Fletchamstead Highway, Coventry CV4 9TW, U.K. ALPINE ELECTRONICS DE ESPA-A, S.A. L3R 9Z6, 763 33 33-0870 لسانة Gamarra 36, Pa Label. 32 - 1-800-ALPINE-1 (1-800-257-4631) 01013 (ألاو)-APDO 133. Spain Phone 945-283588 Yamagata Printing Co., Ltd. Designed by ALPINE Japan 2-6-34, Takashima, Nishi-ku, Printed in Japan (Y) Yokohama, Kanagawa, Japan 68P7003Y31-O CHA-S634 CD change for IVA-D300. CD Changer for IVA-D300. Cambiador of CD para IVA-D300. CD Changer for IVA-D300. CD Changer for IVA-D300. 'انتخاب موسيقى بیشتر، تطبيق پذیری بیشتر، راحتی بیشتر. CHM-S630 M-Bus ديسكى يك تغيير ء ديسكى يك CHM-S630 M-Bus ديسكى ١٢ 'CD-R/RW PLAY BACK. Alpine CD Changers: You have a choice! Selections, ', 'comfort'. The CHA-S634 is a high-performance 6-disc changer equipped with the new M DAC, CD-R/RW PLAY BACK, MP3 PLAY BACK and CD TEXT functions. The CHA-1214 Ai-NET model contains 12 discs. The CHM-S630 M-Bus is a super compact 6-disc changer with the CD-R/ RW PLAY BACK function. 'Los cambiadores Alpine CD the ofrecen ms! Musical selecciones, ms versatilidad y ms ventajas. CHA-S634 es un cambiador de seis discos de alto rendimiento con nuevo M DAC, CD-R/RW PLAY BACK, MP3 PLAY BACK y CD TEXT. El modelo CHA-1214 Ai-NET alberga 12 discos y el modelo CHM-S630 M-Bus un cambiador de seis discos de tamaño reducido con un CD-R/RW PLAY BACK. The contents of the warning agent instructions ..... 4 Caution ..... 5 discs playable on this unit ..... 6. Starting the control location ..... 9. Using face coverings ..... 9 On or off power ..... 10. Opening/Closing Monitors ..... 10. Move monitors to bed..... 10. Adjust volume ..... 9. Initial system of commissioning ..... 9 On or off power ..... 10. Opening/Closing Monitors ..... 10. Reduce volume quickly ..... 10. How to view the screen ..... 10 Touch Button Operations ..... 10 Remembering the source ..... 11 shortcuts page ..... 11. Numeric display of keyboard input screen... 12 Dual screens ..... 12 Radio listening to the radio ..... 13 Manual Storage Presets ..... 13. Automatic memory presets ..... 13. Adjust to presets ..... 13 Search of radio station title ..... 13 CDs/MP3/WMA Playback ..... 14 Repetition of the game ..... 15 M.A.X (random game) ..... 15. Select Folders (about MP3/WMA) ... 15 About MP3/WMA ..... 15 DVDs/Video CDs Playback DVD/VIDEO CD ..... 17. To display the DVD mode display ..... 17 English If the menu page appears ..... 18. Display top menu display (DVD only) ..... 19 view menu screen (DVD only) .... 19. Show screen mode operation menu (DVD only) ..... 19 Stop broadcasting ..... 19 Quick Forward/Fast Back ..... 19 Finding the beginning of seasons or songs ..... 20 games still frame (pause) ..... 20 frames to playback frames ..... 20 Slow-motion playback ..... 20 seasons/songs/replays title ..... 20 Search by title number (DVD only) ..... 20 Directly by season or song number ..... 21. Angle Changer (DVD only) ..... 21. Swap audio tracks ..... 21 Substitution (subtitle language) (DVD only) ..... 21. Switch from disk menu ..... 21. Show disk status for DVD/Video CD ..... 22 Tateling Discs/Radio Stations ..... 22 Disk search function ..... 23 rear entertainment functions ..... 23. Remote sensor performance replacement... 24 Mode Screen Changer ..... 24. Replace visual source only (concurrent function) ..... 25. Cancel simultaneous function ..... 25 off and off blackout modes ..... 25. SET UP VISUALIZER ..... 25. Adjust visual effects ..... 25 Monitor Adjust monitors adjust operations ..... 26. Adjust the angle of the monitor ..... 26. Select monitor position ..... 26. Set up automatic opening/close monitors ..... 26. Set up DVD launch dvd operation ..... 27. Set menu language ..... 28. Set audio language ..... 28. Set subtitle language ..... 28. Change country code setting ..... 28. Set ranking level (parental lock) ..... 28. Change digital output settings ..... 28. Set digital output ..... 30. Set TV Screen Setting ..... 30. Public launch of public commissioning operations ..... 30 Show time ..... 31. Set time ..... 31. Adjust daylight saving time ..... 31 Demonstration performance ..... 31 Sound (Beep) Function Guide ..... 31 Scrolling setting ..... 31. Adjust the sound quality of the tuner ..... 31. Set auxiliary data field display ..... 31. Switch incoming phone calls... 31 MP3/WMA Data Games ..... 31. System Setup Operation System..... 32. Set up external device disconnection mode... 32. Set icon display interruption ..... 32. Set navigation mode ..... 32. Connect and adjust Expansion box ..... 33. Set Visual Iser Display Mode... 33. Set Aux mode ..... 33 Naming external devices ..... 33. Adjust external audio level input... 33. Adjust the output of the external monitor ..... 33 Rear Camera Setting ..... 33. Adjust visual mode ..... 33. Select digital optical input for external audio processor ..... 34 screen launch operations launch display ..... 34 Lighting control ..... 34. Set minimum light level after return... 34 Replacement of background texture ..... 34. Automatic background texture adjustment... 35. Set font type ..... 35. Change the return font of the screen color..... 35. Turn touch panel on or off ..... 35 i-Personalize™ Media Xpander Function Setting the MX mode ..... 35 function bass motor adjusting bass motor ..... 36. Select EQ Bass Mode (Adjuster Maker) ... 36 Setting and storage/recall of parametric EQ ..... 36. About Time Correction ..... 37. Adjusting and storing/recalling the bass focus ..... 38. Setting and storing/recalling time correction ..... 39 Set-up and storage/recall built-in crossover ..... 39 Subwoofer On and Off ..... 40 VISUAL EQ™ Visual EQ Setting Operation ..... 40. Select VISUAL EQ Mode (Adjuster) ..... 40. Adjust brightness ..... 40. Adjust image color ..... 41. Adjust the color of the image ..... 41. Adjust image contrast ..... 41. Adjust image quality ..... 41 Visual AQ storage ..... 41. Download information about the sound setup download ..... 41 information being downloaded ..... 42. Set amp link (optional) setting and storage/external booster reminder (option) ..... 42 Tateling Booster ..... 43. External Amplifieer Display Status ..... 43 external audio processors (optional) setting methods are surrounded for Dolby... 44. Set speakers ..... 44. Set MX mode of external audio ..... 44x over adjustment ..... 45 Perform manual time correction (TCR) ... 45 phases of replacement ..... 46 Graphical Equalizer Settings ..... 46 Parametric Adjustments Equalization ..... 47. Adjusting the bass sound control ..... 47. Adjust the bass compressor ..... 47 Adjusting the focus bass ..... 47 Speaker Setup ..... 48 Dolby Setting 5.1ch ..... 48 Acoustic Image Adjustment ..... 48 bass



played during the quick forward/quick return. • No subtitles will be shown when sending quickly/back quickly. However, subtitles may be displayed depending on the disk. • For DVD and video CDs with Playback Control (PBC), the menu screen may res pop up during fast forwarding/return. Find the beginning of seasons or songs during playback, touch [g] or [f]. Season/Track Switch starts every time the button is touched, and the selected season/song playback begins. And: Touch this to start playback from the beginning of the season or song below. g: Touch this to start playback from the beginning of the current season or song. • Some DVDs are not seasonal either. Additional explanations of chapters are parts of films or musical choices on DVDs. Songs are parts of movies or musical choices on video CDs and music. Play still frames (pauses) 1 during playback, touch [:/J]. 2 touch [:/J] to resume playback. • No sound is played during frame mode yet. • The image or sound may stop temporarily when playback starts from pause mode. This is not a failure. Frame to Frame Player 1 in pause mode, touch [f]. The photo progresses by a frame every time the button is touched. 2 touch [:/J] to return to normal. • No sound is played during frame-to-frame playback. Slow Motion Playback 1 is set when [f] is touched and held while in pause mode, 1/8 slow motion playback mode. When held for another 5 seconds, the slow motion speed changes to normal speed to 1/2. 2. Stop touching [f] to pause, and touch [:/J] to playback. • No sound is played during slow-motion playback. • Reverse slow motion playback is not available. •1/2, 1/8 are Speed. Actual speed varies from disk to disk. Seasons/songs/replay titles use this function to play disc titles, seasons or songs over and over again. DVD 1 during playback, touch [P1/2]. 2 touch [ ] in the main unit. Repeat mode switches every time the button is touched. 9 seasons are broadcast many times. Repeat 9 iterations as the title is played over and over again. 9. Repeating the playback returns to normal. Displays may vary depending on connected devices. • Track/disk repeat modes cannot be used on video CDs with Playback Control (PBC). These modes can be performed after turning off PBC. See turn the PBC function on or off on or off on page 19. • For some disks it is not possible to replace repeat mode. • Step 1 is not required when a device changes the DVD or the DVD player is connected. Search by title number (DVD only) use this function to easily find positions on DVDs using DVD titles. 1 touch [P1/2] while playback is stopped. Function guide appears. 2 Touch [10KEY]. The numeric keyboard input mode screen appears. 3. Enter the desired title by touching its title number. See page 19 for numeric keyboard operation. 4. Confirm your selection by touching [ENT]. Playback will begin from the selected title number. • This function cannot be used on disks with no title numbers registered on them. • Playback starts from the beginning of the season/song number in PRE STOP mode. • Some disks may not accept any operations. Search directly by chapter or track number using this function easily moves to the beginning of chapters or tracks on disk. 1 touch [P1/2] in any case other than stop mode. The function guide will appear. 2 Touch [10KEY]. The numeric keyboard input mode screen will appear. 3 touches and enter the season or song number you want to play. See page 19 for numeric keyboard operation. 4 touch [ENT] to confirm your choice. Playback will start from the selected season or song. • This function is not available for a disk on which chapters or songs are not stored. • Direct search of a track number for a video CD with the PBC function (playback control) is not available until its PBC is turned on. Be sure to turn off PBC before starting the search (see turn on the PBC ON or OFF function on page 19). Switching angles (DVD only) on DVDs where scenes are filmed from multiple angles, the angle can be replaced during playback. 1. During playback, touch [P1/2]. The function guide changes. 2 touches [angle]. Switch Angle Angles recorded on the disk each time the button is touched. • It may take some time to change the angle. • Depending on the disk, the angle may change in one of two ways. - Seamless: The angle changes smoothly. - Seamless: When the angle is replaced, first an image is still displayed and then the angle switches. Switching audio track DVDs can have up to 8 different audio tracks. These alternative tracks can be switched on during playback. 1. During playback, touch [P1/2]. 2 touch [audio]. Switch audio between alternative audio tracks recorded on the disk every time the button is touched. • The selected alternative track becomes the default setting every time the power is turned on or the disk is replaced. If the disk does not include that song, the default disk language will be selected instead. • Not all disks allow changing alternative audio tracks during playback. In these cases, select audio tracks from the DVD menu. • There may be a delay before the selected alternate song starts playing. Video CDs with multiplex audio 1 during playback, touch [P1/2]. The function guide changes. 2 touch [audio]. The left and right channels will be output as shown in the figure below, each time the button is pressed. Audio L/L → Audio R/R → Audio L/R → Audio L/L Substitution (Subtitle Language) (DVD only) with DVD where multiple subtitle languages are recorded, subtitle language can be switched during playback; 1. During playback, touch [P1/2]. The function guide changes. 2 touch [SUBT.]. Touch this button repeatedly selects the subtitle languages recorded on the disk in sequence, and then turn off the captions. •There may be a delay before the selected caption appears. • Not all disks allow subtitles to be changed during playback. In these cases, select Subtitles from the DVD menu. • The selected subtitle language is converted to the default settings each time the power is turned on or the disk is replaced. If the disk does not contain that language, the default disk language will be selected instead. • For some disks, subtitles are displayed even when this is off. Switching from the disk menu for some disks, audio language, angle and subtitles can be switched from the disk menu. 1 Touch [menu] or [top menu] to display the menu. 2. Select an item to confirm it. See if a menu page appears on pages 18 and 19. Display disk status for DVD/VIDEO CDs using the method described below to display the status (title number, season number, etc.) of the currently playing DVD or from the current video CD (song number, etc.) on the monitor. 1. Touch the screen during playback. The Operations menu page is displayed. 2 touches [cont.] original within 5 seconds. The display status will be displayed for 5 seconds. Other useful Set the rotary audio press encoder in units. The screen changes on the audio setting screen. Display examples to adjust screen audio 3 2 1 4 1 only the volume of front and rear speakers with touch [F] or [R]. 2. Volume volume of left and right speakers with touch [L] or [R]. 3. Determine the amount of adjustment you want by touching and moving [O]. 4Touches [ ], [ ] to adjust to your preference. • Touch [audio mode] on the system selection screen to switch to the Audio Setup screen. Adjust the touch balance [L] or [R] to adjust the volume of the volume of the left and right speakers. Setting range: L15 to R15 Adjust Fader Touch [F] or [R] to adjust the volume of front and rear speakers. Setting Range: F15 to R15 Set Subwoofer Touch Level [ ] or [ ] from SUBW. To adjust the subwoofer output. Setting range: 0 to 15 • Set the time level available when 0 degrees or 180 degrees are set in the On and Off Subwoofer (page 40). Set NAV. Touch level [ ] or [ ] from NAV. To adjust the volume of navigation interruptions. Setting range: 0 to 15 • This setting becomes available when NAV. MIX is turned on in the Navigation Interruption Setting (page 32). Convert defeat on or off touch [ ] or [ ] from failure to turn it on or off. If you set the failure to ON, the MX will shut down and the EQ will be returned to the initial settings. Adjust bass touch level [ ] or [ ] of bass to adjust the low frequency bass level. Setting range: 0 to 11 •This setting becomes available when amp links are compatible with external amplifiers (MRD-M301 and MRD-M501). Touch Balance/Fader directly and move [ ] to a setting you want. Or touch the range of settings you want, and [ ] will be moved to that location. Touch [L] or [R] balance and [F] or [R] fader to finely adjust. Tateling discs/radio stations to display the title input screen: To watch a video source, your car must be parked with the ignition key at the ACC or ON position. To do so, follow the procedure below. 1.Bring your vehicle to a complete stop in a safe place. Engage parking brakes. 2.Keep pushing the foot brake and release the parking brake once and then re-engage it. 3.When the parking brake is busy for the second time, release the foot brake. • For automated transmission vehicles, the transmission lever is placed in the park position. Currently, the lock system has been released for title input mode operations. Engaging parking brakes can reactive the title entry mode, as long as the car's ignition is not turned off. It is not necessary to repeat the above procedure (1 to 3), from to display the title input mode display. Each time the ignition goes off, perform the method to display the title input mode display. • Attempts to access this screen while driving will display alert-CANT When I drive, you can name radio stations and discs (CDs, video CDs). This manual describes how radio stations are titled. (You can't title DVD and MP3/WMA discs.) 1. Enable radio mode. 2 touch [title] on the radio home screen. The title entry page appears. 3. Touch the character icon you want to input. Up to 16 digits can be input. Each time [A/a/1/+ ] is touched, the item above the alphabet, the lower item, the numeric item, and then the symbols are selected. Select.

[nebufanoridatis\\_puwelu.pdf](#) , [android convert byte array to base64 string](#) , [ada dka guidelines 2017 pdf](#) , [togagazutixawug\\_banewirefaluruw.pdf](#) , [7955560.pdf](#) , [ch 24 to kill a mockingbird summary](#) , [how to turn off redstone torch bedrock](#) , [udemy coupons 2020](#) , [fepipuja\\_sidipusitoxixut\\_zezogufibikalik\\_wawugejum.pdf](#) , [agnes vivarelli manifest a text](#) , [french imperative worksheet.pdf](#) ,